

## 3-in-1 "Easy" Remote Programming

The Auto-Search Method scans through all of the codes in the remote, one at a time, allowing you to identify the correct code. Follow these steps:

1. Turn on the device, such as your TV, that you want the remote to operate.
2. On your remote, press the corresponding device button [TV, Cable Box, etc.] and the OK/SEL button simultaneously for three seconds. The device LED will turn on to indicate the remote is ready to be programmed.

**Note:** The LED will remain on for 20 seconds. The next step must be completed while it is on.

3. Point the remote at your device and press the CH+ or CH- button. The remote will emit power on/off code signals. Continue to step up or down until your device turns off.
4. Press MUTE to confirm the device was programmed successfully. The device should turn back on.
5. Press the corresponding device button to store the code. The POWER LED will blink twice to confirm the code has been stored.



**For detailed instructions including codes for manual programming, click below:**

[Big Button UR3-SR3](#)