

# How to change your WiFi Password

## Arris TG1672G/DG1670A

Easy way - Just contact us! We can change your password and network name for you on these devices.

BUT if you like doing this yourself, or change your password often, here is what you can do:

- Make sure you are connected to the router's network, either by Wi-Fi or ethernet cable.
- Open your browser and visit <http://192.168.0.1>, you will be prompted with a login box.
- Enter the username: **admin** and the password **password** (Note: *If you have already changed the password use that instead.*)
- Once logged in, you'll see the screen like what you see here. Change the Pre-Shared Key to your desired password.
  - **Note: We recommend changing the Wireless Network Name (SSID) when changing the password.** Some devices will not prompt you for a new password if the password on your WiFi network changes, so you don't have to wade through all the steps to make your computers or devices "forget" the network so you can put a password in.
- You have two networks, the 2.4 Ghz, and the 5 Ghz. You can change just one or both networks' passwords at the same time.
- Click apply at the bottom of the screen, and log into your new network when it shows up. It can take up to 5 minutes for your devices to see the new network names.

