

# Quick Setup - Evolution HD DTA Remote

## Programming Instructions:

1. Hold the Setup button until the light on the remote turns green.
2. Enter the 5-digit code for your TV brand.
3. Test the TV function buttons to make sure they work, i.e. the power button, volume up and down and mute.
  1. If the code doesn't program your remote or other TV function keys don't work, like the volume keys, repeat from the beginning with the next code for your TV brand. Refer to the [HD Digital Adapter Remote Control User Guide](#) for a full list of programming codes
  2. The TV Input key will not work on all models. If you go thru all the codes for your TV and the volume keys work but not the TV Input key then your model will not be able to utilize that function key.



Manufacturer	Code
Coby	10011, 10415
Element	10001, 10011, 10355
Emerson/Dynex	10091, 10311, 10347, 10355, 10366
GE	10083
Hitachi	10368
Insignia	10091, 10366
JVC	10011, 10040, 10134
LG	10128, 10315, 10439

Magnovox	10066, 10086, 10415
Memorex	10516
Mitsubishi	10245
Olevia	10011, 10342
Panasonic	10005, 10076, 10485
Phillips	10321, 10415
Polaroid	10335
RCA	10004, 10011, 10413, 10415
Sanyo	10013, 10081, 10431
Samsung	10092, 10305, 10542
Seiki	10011
Sharp	10034, 10077, 10375
Sony	10043, 10067, 10355, 10409
Sylvania	10008, 10155, 10311, 10355
TLC	10232
Toshiba	10021, 10129
Trutech	10315
Vizio	10011, 10315
Westinghouse	10092, 10409